



## AR8013—Mounting Kit for HP® L-class Server


This kit is used to mount an HP L-class or rp5400 series server in a NetShelter VX enclosure.

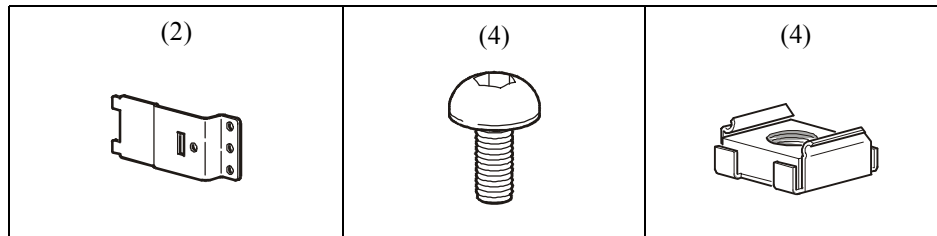

1. Choose a location on the rack to mount the HP slide tray.
2. Install an APC adapter bracket onto the left-hand front mounting flange of the NetShelter enclosure, using two M6 × 12 screws (provided) and two caged nuts.

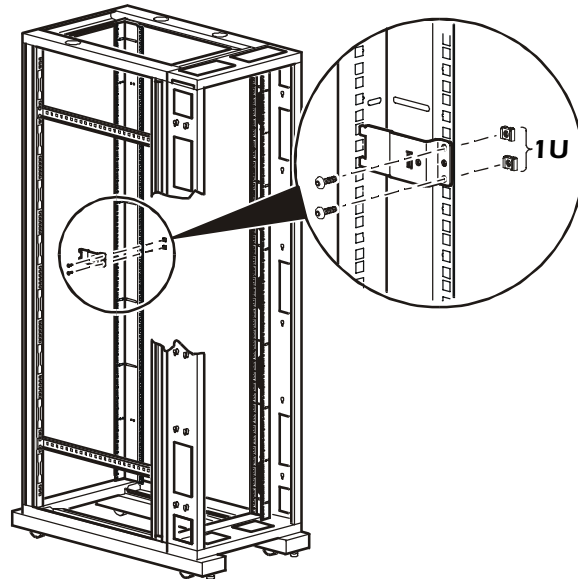


3. Attach the rail (337079-L) onto the adapter bracket.
  - a. Tilt the rail forward and hook its L-shaped connector into the slot on the adapter bracket.

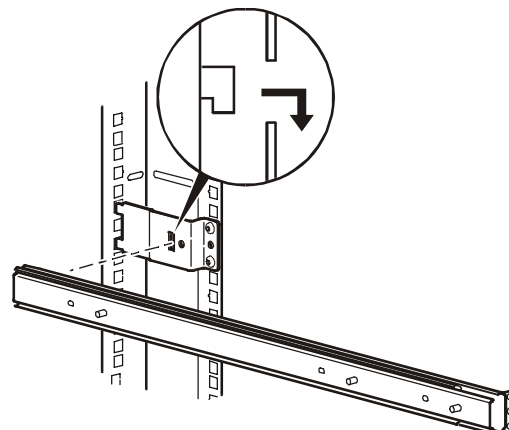


b. Slide the stud at the end of the rail through the square on the rear mounting flange at the center of the chosen U-space.

c. Install two M5 × 16 screws with cress cup washers (provided by HP) into the rail to secure it in place on the rear mounting flange.

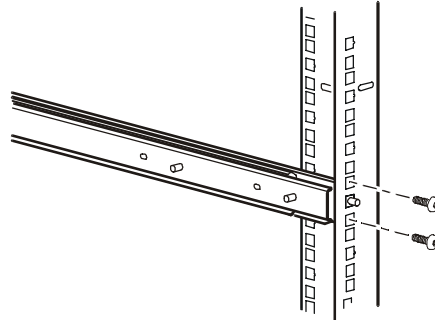


4. Slide the rail out to its full length, and install one M5 × 16 screw with washer (provided by HP).

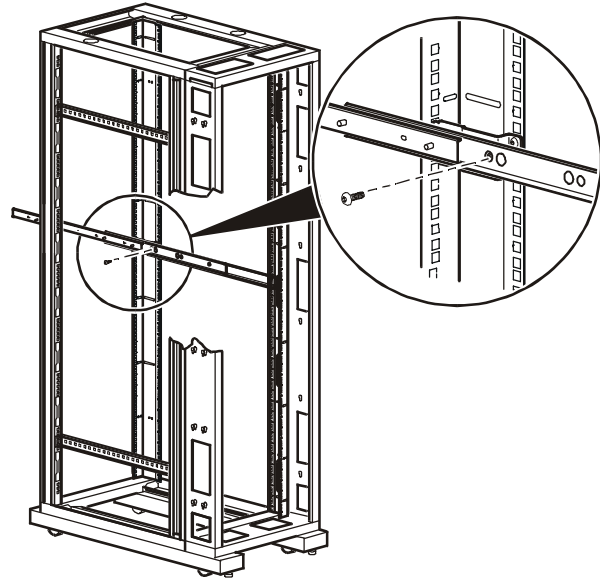

5. Repeat steps 1–4 for the other side, using rail 337079-R.

6. Install the HP Shelf onto the rails. The slots on the shelf will align with the pins on the rails. Secure with six M5 x 12 screws (provided by HP).

7. Continue with installation of HP L-class server per HP instructions

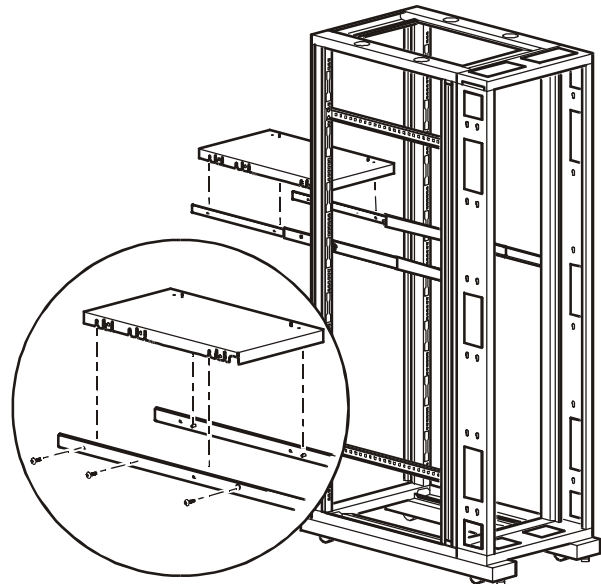

Entire contents copyright © 2002 American Power Conversion. All rights reserved. Reproduction in whole or in part without permission is prohibited. APC, the APC logo, and NetShelter are trademarks of American Power Conversion Corporation and may be registered in some jurisdictions. All other trademarks, product names, and corporate names are the property of their respective owners and are used for informational purposes only.